

— STILL SPIRITS —

PARROT HEAD

SMALL | LARGE



INSTRUCTIONS
FOR USE



YOUR COMPANION FOR CREATING

PARROT HEAD SMALL | LARGE

**CHECK YOUR ALCOHOL PERCENTAGE DURING
DISTILLATION WITHOUT INTERRUPTION.**



WARNING :

Distillation systems produce a highly flammable liquid.

SAFETY INSTRUCTIONS:

- The body of the Parrot Head must be attached securely to the base with the supplied nut.
- Do not consume from the Parrot Head.
- Do not use the Parrot Head to collect foreshots.
- Always use the Parrot Head in a room with adequate ventilation.
- Never leave the Parrot Head unattended when operating.
- When containing distillate, keep the Parrot Head away from all sources of ignition, including smoking, sparks, heat, and open flames.
- Ensure all other equipment near the Parrot Head or the alcohol is earthed.
- A fire-extinguishing media suitable for alcohol should be kept nearby. This can be water fog, fine water spray, foam, dry powder, carbon dioxide, sand, or dolomite.
- Keep away from children.
- Ensure the distillate out pipe (or tube) is never submerged in the distillate, otherwise, the boiler may implode. You should see the drops of distillate falling into your collecting vessel.

IN CASE OF SPILLAGE :

- Shut off all possible sources of ignition,
- Clean up spills immediately using a cloth, paper towels or other absorbent materials such as soil, sand or other inert material.
- Collect, seal, and dispose of accordingly.
- Mop area with excess water.

SPECIFICATIONS

Size	Recommended Use	Set Up	Distillate level required for accurate measurement
Large	Recommended for use with the Still Spirits T500 Reflux & Alembic Distilling Systems, or other larger stills.	A or B	The distillate level within the Parrot Head must be at a minimum of 252mm from the base of your alcometer for an accurate reading of your ABV/proof.
Small	Recommended for use with the Still Spirits Air Still or other small stills.	A	The distillate level within the Parrot Head must be at a minimum of 174mm from the base of your alcometer for an accurate reading of your ABV/proof.

INSTRUCTIONS FOR USE:

1. Set up your distillation system as per instructions for use.
2. Start your distillation as per normal.
3. After you have discarded your foreshots, set up your Parrot Head using one of the two set-up methods detailed on the previous page.
4. Place your alcometer* in the alcometer area of the Parrot Head.
5. As you distil, the Parrot Head will allow for the continuous measurement of the distillate ABV/proof as it comes from your condenser, through the Parrot Head, and into your collection vessel.

For the most accurate results, check your distillate temperature and adjust the reading if necessary, according to the temperature your alcometer is calibrated against.

*Alcometer not supplied.


ASSEMBLY & SET-UP

Assembly:

Assemble the Parrot Head by placing the stem of the body into the base and securing into the base with the supplied nut.

Set Up:

1. There are two ways you can use the Parrot Head, depending on your still and the size Parrot Head you have:
 - A) Collect the distillate as it drips from the condenser by placing the collection cone of the Parrot Head directly underneath the distillate out tube on your condenser; OR
 - B) Connect the Parrot Head collection pipe to your distillate out tube on your condenser directly, using the tubing that comes with your condenser; THEN
2. Place your collection vessel under the distillate out pipe.

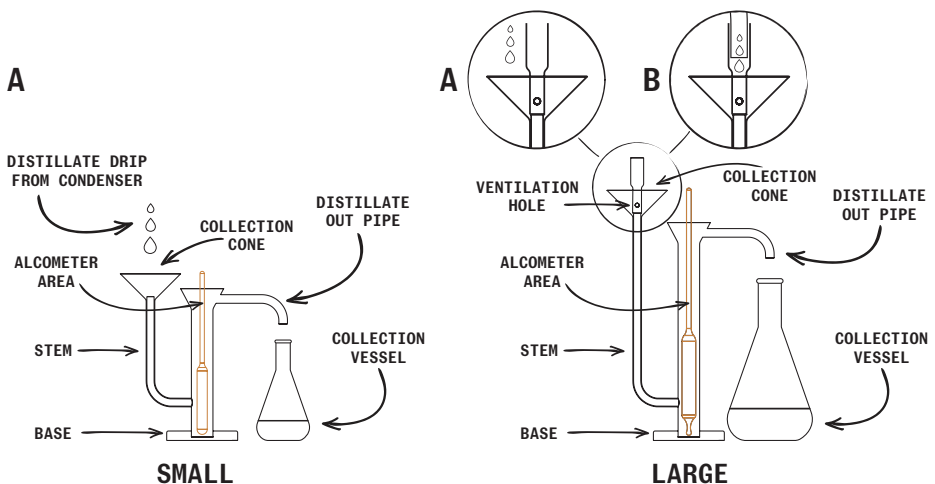

IMPORTANT: If using a distillate out tube that will connect over the Parrot Head collection pipe, it is important you do not extend it too far so that it covers the ventilation hole.






www.stillspirits.com



Please
recycle me

V1